

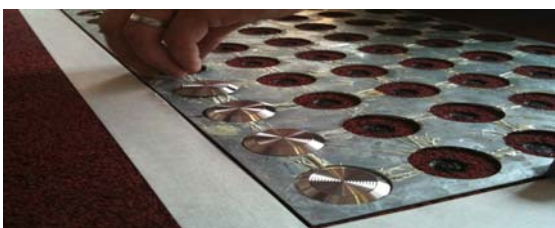


**TACTILE INDICATORS LAYOUT & INSTALLATION INSTRUCTIONS  
FOR CARPET ONLY**

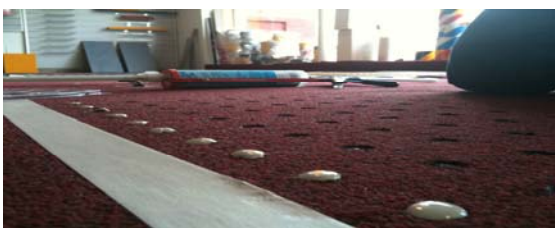

- 1) Place template with holes into position and tape down to hold firm.
- 2) Using the Floorsafe burning wand place into template hole and burn out circle. (Approx 3 - 4 seconds)
- 3) Continue to complete the whole template.
- 4) Remove the template.

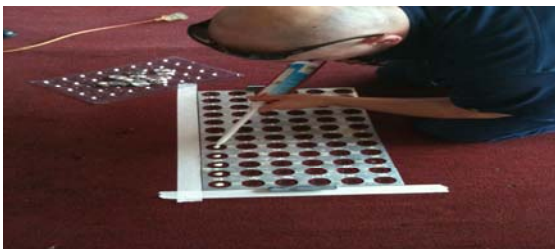

- 5) Position the circle cut-out template over the holes. Apply enough Tactile adhesive into hole to come just above level of carpet.
- 6) Insert the Stainless steel T07 3mm Tactile into hole and press firmly down into position.
- 7) Continue to complete the template.

To move the template along remove the template and position over the last 3 rows of tactiles. This will insure the template is straight.

**ALLOW 2 - 4 HOURS DRY TIME  
BEFORE ALLOWING FOOT  
TRAFFIC.**